

Spare Bezel/OCP Replacement Instructions


This document describes how to remove and replace a bezel in a NEO S-Series library from Overland Storage. These instructions are intended for trained system administrators and service personnel.

WARNING: To reduce the risk of electric shock or damage to equipment, always remove any power cords while working with the library.

WARNUNG: Um das Risiko eines elektrischen Schlags oder Schäden am Gerät zu vermeiden, ziehen Sie stets den Netzstecker, bevor Sie an der Einheit arbeiten.

AVERTISSEMENT: Pour réduire le risque de choc électrique ou endommagement de l'équipement, retirez toujours les cordons électriques en travaillant avec l'appareil.

CAUTION: While working with the library, observe standard Electrostatic Discharge (ESD) precautions to prevent damage to micro-circuitry or static-sensitive devices.

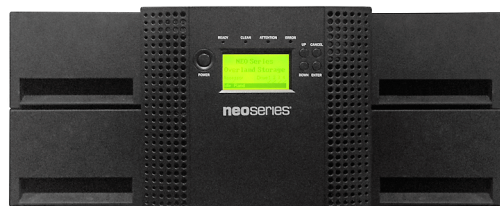

Prepare the Unit

Power Off the Library

1. Remove any magazines from the library.
2. Verify that the **robotic assembly** is in its parked position.
3. Verify that all host processes are **idle**.
4. Power off the library from the front panel by depressing the **power button** and holding it for 3 seconds.
If the library does not perform a soft shutdown, depress and hold the power button for 10 seconds.



Install/Replace Bezel

Remove the Bezel

1. **Loosen and retain** the screws attaching the bezel with a Phillips screwdriver.


Screws may be on one or both sides of the bezel. Refer to the photos for screw locations.

2. **Remove** the bezel.


NOTE: If removing a base module bezel, pull gently to avoid damaging the OCP cable. Note where the OCP cable is located, routed, and attached.

3. **Set the old bezel aside** for return to Overland.

StorageLoader (1U) Left

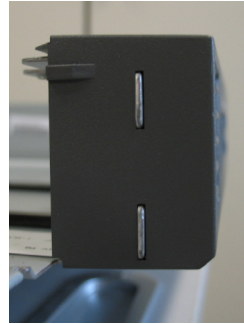


StorageLoader (1U) Right

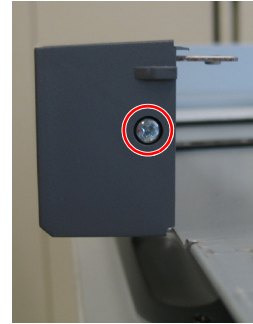

T24 (2U) Left



T24 (2U) Right

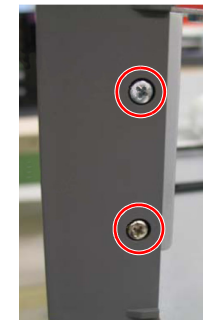

T48 (4U) Left



T48 (4U) Right



Install the New Bezel

1. Place the **bottom tabs** of the new bezel into the slots in the bottom of the module.
2. If installing a base module bezel, carefully reroute and attach the OCP cable.
3. Rotate the bezel and **snap** in the top corners.
4. **Secure** the bezel with the retained Phillips-head screws.
5. Place both **left and right magazines** back into the library.



Reassemble the Unit

Power On


1. **Power on** the library by pressing the power button; the green light will illuminate.



Return Previous Parts to Overland

1. Place the **previous part** in the anti-static bag and put it in the replacement part's box.
2. Use the existing **packing material** to secure it in the box.
3. Use an RMA to return the part to **Overland Storage**.

For return shipping details and RMA number, go to:
<http://docs.overlandstorage.com/return-instructions>.

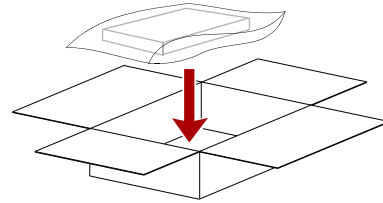

<http://support.overlandstorage.com>

You can get additional technical support on the Internet at the [Overland Storage Support web page](http://support.overlandstorage.com), or by contacting Overland Storage using the information found on the [Contact Us](#) page on our web site.