

Spare Fan Assembly Instructions


This document describes how to remove and replace a spare fan assembly in a NEO XL-Series library or expansion unit from Overland Storage.

WARNING: To reduce the risk of electric shock or damage to equipment, always remove any power cords while working with the unit.

WARNUNG: Um das Risiko eines elektrischen Schlags oder Schäden am Gerät zu vermeiden, ziehen Sie stets den Netzstecker, bevor Sie an der Einheit arbeiten.

AVERTISSEMENT: Pour réduire le risque de choc électrique ou endommagement de l'équipement, retirez toujours les cordons électriques en travaillant avec l'appareil.


CAUTION: While working with the unit, observe standard Electrostatic Discharge (ESD) precautions to prevent damage to micro-circuitry or static-sensitive devices.

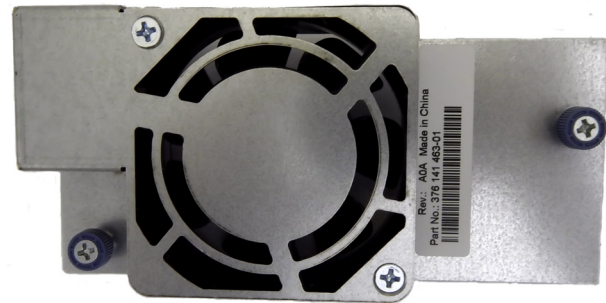

Install and Replace the Fan Assembly



Remove the Fan Assembly

1. Loosen the **two blue captive thumbscrews** on the chassis fan assembly.
2. Using the thumbscrews, slowly remove the **fan assembly** from the library.
Set the old fan assembly aside for return to Overland.

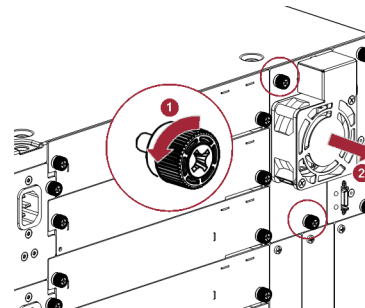

Replace the Fan Assembly

1. Align the **tabs** on the library with the **slots** at the top of the chassis fan assembly.
2. Push in the **fan assembly** until it is flush with the back panel of the library.
3. Finger-tighten the **blue captive thumbscrews** to secure the assembly to the library.

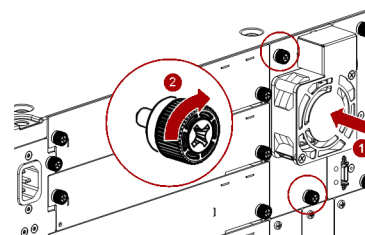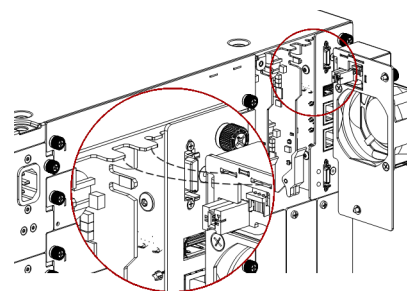

Verify the Chassis Fan Assembly Installation

1. Verify that the **new chassis fan assembly** is installed properly by checking the OCP or RMI.

The event that indicated the chassis fan assembly was faulty should be cleared.


2. If the **blue UID LED** is still illuminated, deactivate it using **Maintenance > UID LED Control**.



Return Old Parts to Overland

1. Place the **old part** in the anti-static bag and put it in the replacement part's box.
2. Use the existing **packing material** to secure it in the box.
3. Use an RMA to return the part to **Overland Storage**.

For return shipping details and RMA number, go to: <http://docs.overlandstorage.com/return-instructions>.

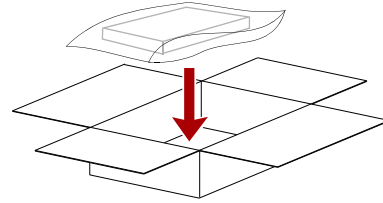

<http://support.overlandstorage.com>

You can get additional technical support on the Internet at the **Overland Storage Support web page**, or by contacting Overland Storage using the information found on the **Contact Us** page on our web site.