

Application Note

November 2014

NEOxl 60 Tape Library 20-Slot Upgrade Procedure




Summary


This application note describes how to install a License Key to upgrade a NEOxl 60 tape library by adding 20 slots.

Use these steps to install the License Key:


1. Login to the library Remote Management Interface (RMI) as **administrator** user.

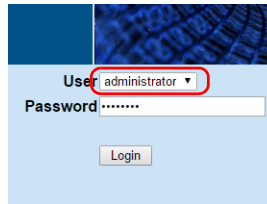


2. Navigate to **Configuration > System** and select **License Key Handling** on the right.

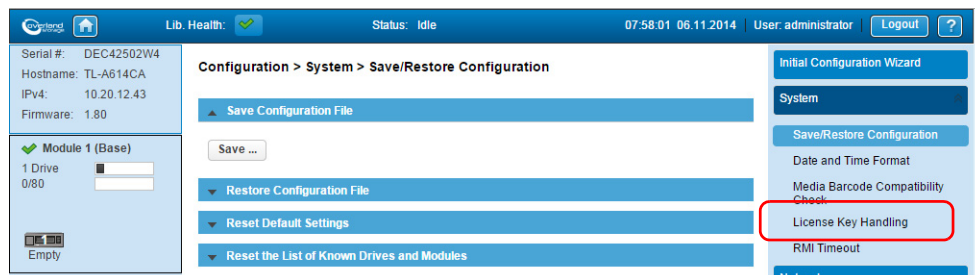

3. Enter your 20 Slot Upgrade License Key and click **Add License**.

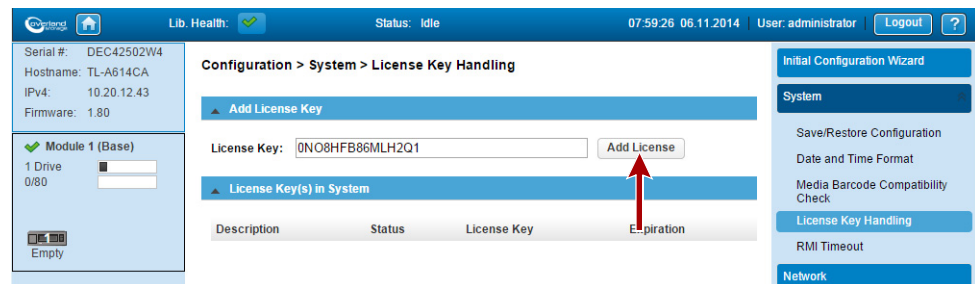


4. You should see a license added dialogue box, then the License Key Handling page should refresh and show the **Slot Extension Pack 1** license active.

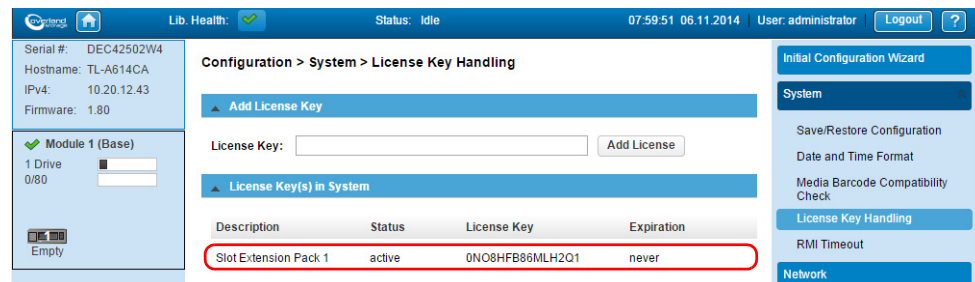


The 80 slot capacity license should now be active.

5. Navigate to **Configuration > Partitions** and run either the **Basic Wizard** or **Expert Wizard** to configure the licensed slots.

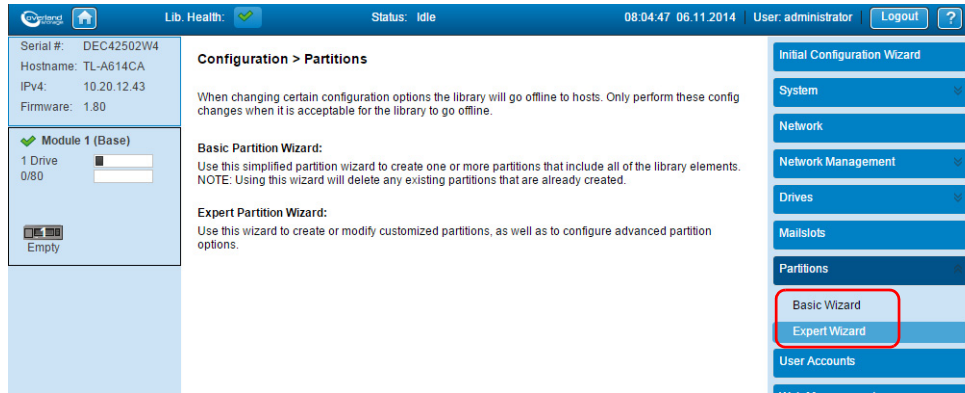

- **Basic Partition Wizard:**

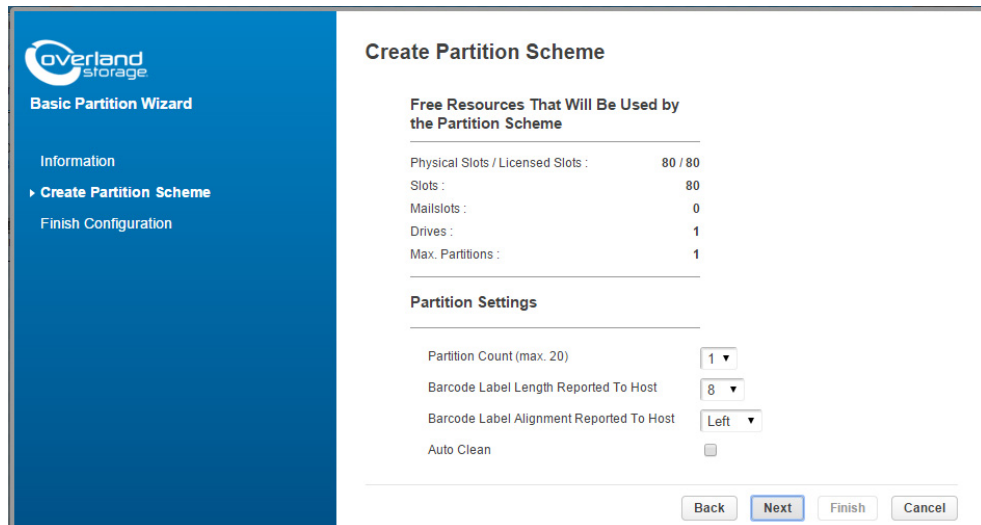

- **Expert Partition Wizard:**

