

# Application Note

November 2014

## NEOs T24 Tape Library 12 to 24 Slot Upgrade Procedure




### Summary


This application note describes how to install a License Key to upgrade a NEOs T24 tape library from 12 to 24 slots.

Use these steps to install the License Key:


1. Login to the library Remote Management Interface (RMI) as Admin user.

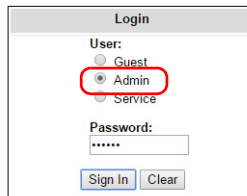

2. Navigate to **Configuration > License Key**.
3. Enter your NEOs T24 12/24 Slot Upgrade License Key and click **Submit**.

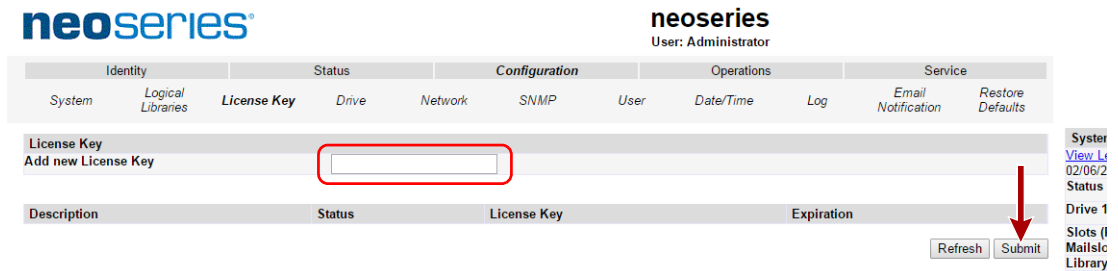

4. At the confirmation screen, click **OK**.
5. At the License Key success message, click **OK**.  
The **Configuration > License Key** page should show the new license key.
6. To have the new License Key take effect, navigate to **Service > Reboot** and click **Reboot**.

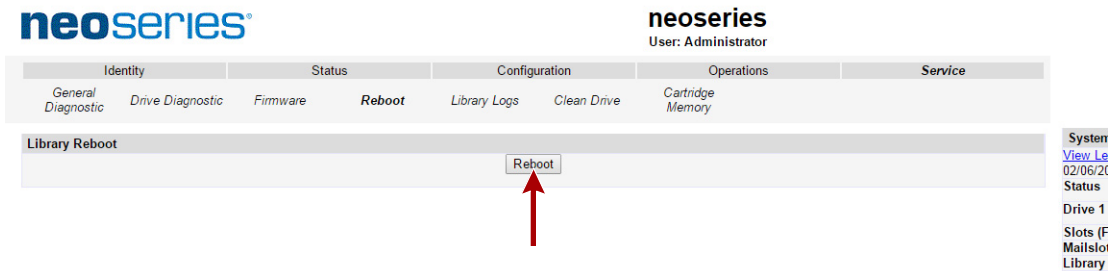

7. After the library reboots, log in to the RMI of the library to **verify 24 slots** are now active.

